


Fraises à angler
Chamfering drills
Fasenfräser

1390

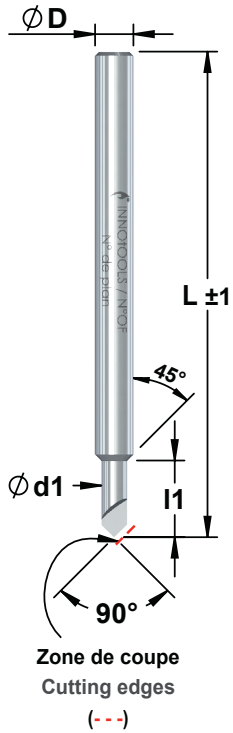

Ød1 ^T	l1	Z	ØDh6	L
0.50	3.00	1	3	39
0.60	3.00	1	3	39
0.70	3.00	1	3	39
0.80	3.00	1	3	39
0.90	3.00	1	3	39
1.00	3.00	1	3	39
1.10	3.00	1	3	39
1.20	3.00	1	3	39
1.30	3.00	1	3	39
1.40	3.00	1	3	39
1.50	4.50	1	3	39
2.00	6.00	1	3	39
2.50	7.00	1	3	39
3.00	-	1	3	39


1 dent renforcée à 90°
1 reinforced tooth 90°
1 Zahn verstärkt 90°



^TTol: Ød1 +0.005/ -0.01


Fraises à angler
Chamfering drills
Fasenfräser

13120

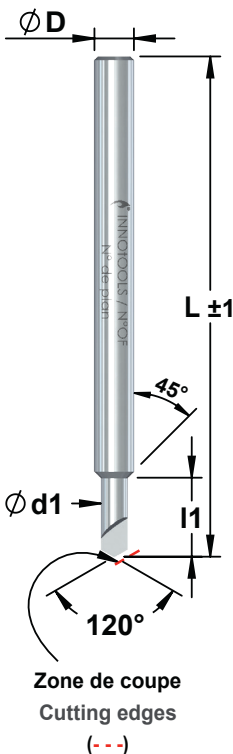

Ød1 ^T	l1	Z	ØDh6	L
0.50	3.00	1	3	39
0.60	3.00	1	3	39
0.70	3.00	1	3	39
0.80	3.00	1	3	39
0.90	3.00	1	3	39
1.00	3.00	1	3	39
1.10	3.00	1	3	39
1.20	3.00	1	3	39
1.30	3.00	1	3	39
1.40	3.00	1	3	39
1.50	5.00	1	3	39
2.00	6.00	1	3	39
2.50	7.00	1	3	39
3.00	-	1	3	39

1 dent renforcée à 120°
1 reinforced tooth 120°
1 Zahn verstärkt 120°

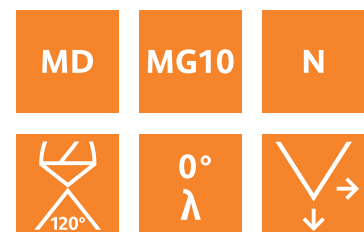

^TTol: Ød1 +0.005/ -0.01